



[www.vac-rac.com](http://www.vac-rac.com)

[info@vac-rac.com](mailto:info@vac-rac.com)

## COMBI BASE - INSTRUCTIONS



## **For use on steel only**

### **INSTRUCTIONS**

#### **Please read and follow carefully.**

- Ensure bases and surface is clean, then press the unit on a flat area without gaps
- Flexible base will allow for some curvature
- Pressing down expels air – make sure all edges of the base are in contact with the surface
- To remove the base simply pull up on the pull tab
  
- If a base picks up metal swarf due to being placed on a workshop floor it can be easily wiped clean by cloth or wiping a strong magnet across the base
- The longer the base is attached the more secure it becomes, air and water are gradually expelled
- To keep them clean and flat - store the bases face to face