



www.vac-rac.com

info@vac-rac.com

LOC RAC BASE – INSTRUCTIONS



INSTRUCTIONS

Please read and follow carefully.

- Make sure the lever is in the **OFF** position
- Ensure bases and vehicle are clean, then press the unit on a flat area without gaps
- Press down and operate the lever to the ON position
- Remove lever
- To remove base - undo the lever and pull up on the pull tab

TIPS

- Visible outlines after removal are usually caused by dust outline of base where no dust has landed and can be removed with soapy water
- Attach bright coloured string to the lever to avoid loss!

- Levers **MUST** be in the **OFF** position when not in use
- **DO NOT** operate the lever past the OFF stop position when not in use
- Fit the protective covers when not in use

Some Applications

Attaching Devices to vehicles - Signs - Lamps - Beacons etc. -

External Shop Window Signs - Banners - Menus - Sale Signs -

Add on roof rack bar - rear bar added to normal estate car bars