

www.vac-rac.com

info@vac-rac.com

QUAD BASE - INSTRUCTIONS



INSTRUCTIONS

These bases will work to minus 35C

Please read and follow carefully.

- Make sure the levers are in the OFF/UP position
- Ensure bases and surface are clean, then press the unit on a flat area without gaps
- Make sure both bases lie flat on the surface (See Drawing below)
- Press down and operate the levers to the ON position
- To remove undo the levers and pull up on the pull tabs


TIPS

- Visible outlines after removal are usually caused by dust outline of base where no dust has landed - can be removed with soapy water
- Levers MUST be in the OFF position when not in use

Some Applications

Attaching Devices to vehicles - Signs - Lamps - Beacons etc. - External Shop Window Signs - Banners - Menus - Sale Signs - Add on roof rack bar - rear bar added to normal estate car bars

The metal plate should be adjusted to vehicle curvature as follows:

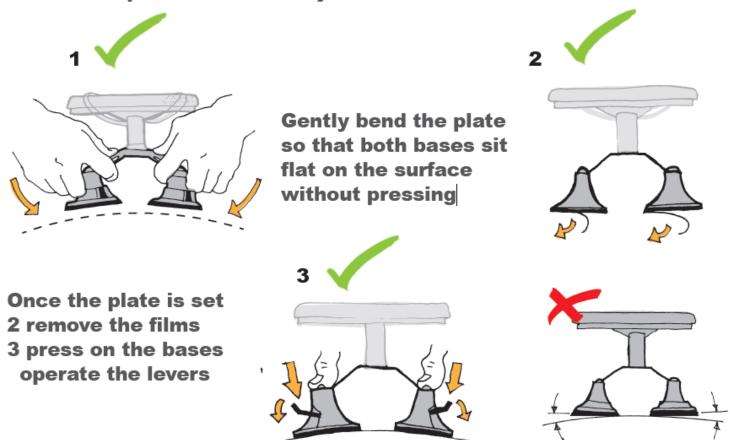

Please read box instructions